

Дистрибутор
Sunnysoft sro
Кованечка 2390/1a
190 00 Прага 9
Чехия
www.sunnysoft.cz

Ръководство за прилагане

Този продукт е оборудван с функция WIFI hotspot, той може да реализира връзката между хос та и мобилния телефон, без да използва мобилен трафик.

Стъпка 1: Изтеглете ПРИЛОЖЕНИЕТО от пазара за мобилни приложения (вижте QR кода за Android и Apple).

Стъпка 2: Влезте в екрана с настройки и превключете превключвателя **WIFI** (или натиснете продължително клавиша за бърз достъп на настройките на екрана за преглед на видео, за да влезете в режим **WIFI**).

Стъпка 3: Включете функция та WIFI на мобилния телефон и потърсете името на WIFI с LNDUXXXX, за да се свържете. Паролата е „12345678“ . Стъпка 4: Отворете мобилното ПРИЛОЖЕНИЕ и осъзнайте прекрасното взаимодействие между тях и мобилния телефон.

Бутони и функції

[illegible]

Изтеглете приложението

 
IOS



Android




» Инструкции за продукта

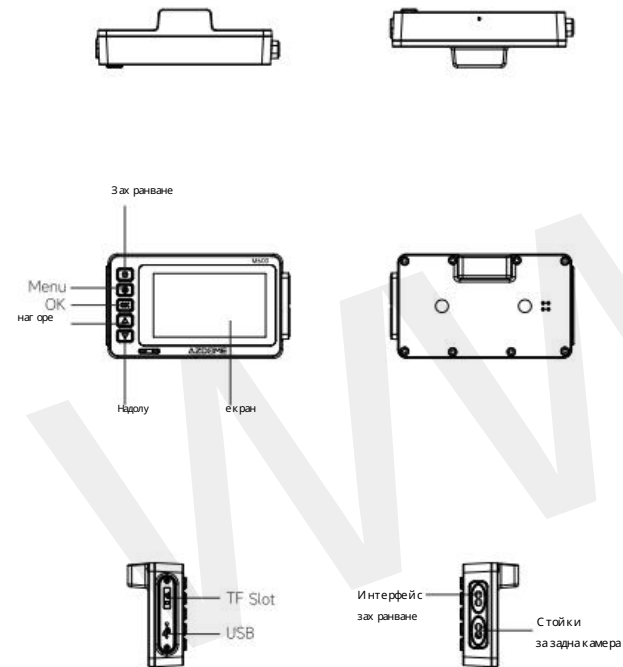

» Спецификации

Име	Спецификация
Модель	M600
Размер	106,4 mm × 61,2 mm × 33,6 mm
Видоерезолюция	1080P
Экран	3.0
GPS	Двойной режим GPS/Beidou
Компас	GPS компас
Батарея	Встроенная батарея
Углы на объектива	121
Апертура	F1.8
Видеоформат	MP4
Формат на снимката	JPG
Память	TF карта (макс. поддержка 512GB)
MFI	поддержка
Сенсор	Сенсор заднего: 4 в 1, высокая точность Сенсор переднего: 4 в 1, высокая точность
Напряжение	5V
TPMS	Не поддерживается
BSD алгоритм	Независим от чипа алгоритм
Рабочая температура	-10°C - 65°C

 » С ъ д ъ р ж а н и е н а о п а к о в к а т а

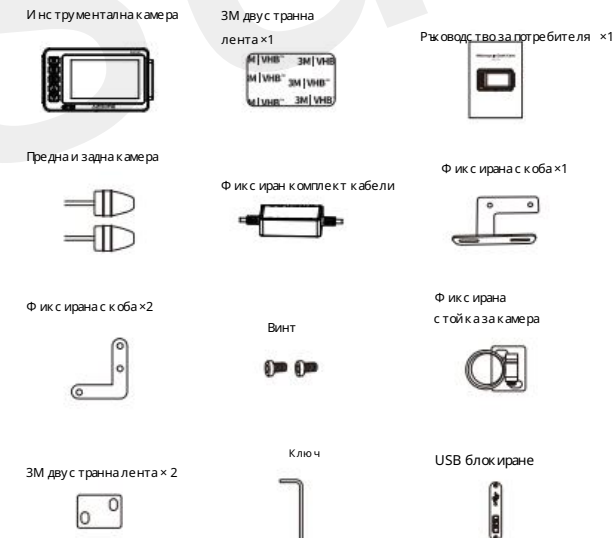


●>> **Съвети**

1. Този продукт принадлежи към рекреативните заобичаеми на много от клиентите, той може да се адаптира към различни екстремни условия: нахлуване, нощна игра, дъжд, вятър, слънце, мания и друг и т.н. имаме, за да избегнете повреда на водонепроницаемостта.
 2. Този продукт поддържа водонепроницаемостта IP67, но изберете ватите директно измиване с воден пистолет под височина от 3 метра. Преди да инсталирате този продукт, изключете частта, равнаваща на много от клиентите, намерете най-добрата позиция, за да подобрите машината и следващо включете частта АСС за равняване на много от клиентите.
 4. Този продукт използва режим на съхранение на клипс и клипс запис.
- Ако намерите има такъв ранени важни файлове, моля, помислете за видеото на TF картата

Инструкции за монтаж




 ●>> Връзка

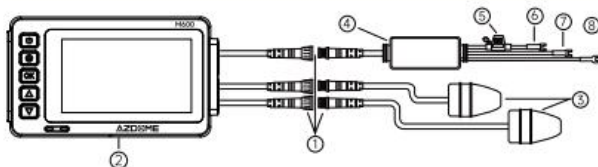


1. Кога отговаряте периферни устройства, подравнете и словесно закарти и изговорете.
2. M600 Г о ст
3. Предна и задна камера (към ала линия е предна камера, адат ала линия е задна камера)
4. Зак разващачет
5. Застрок овка
6. Черения т кабел е за свързване към полупроводителя . полюс на батерия та, постоя нно напрежение (9 - 40V)
7. Жития т кабел е за свързване на АС (с мултиуров напрежение, 9 - 40V)
8. Черия т е отрицателния т полюс на задак разването

 Описание на работния интерфейс на M600

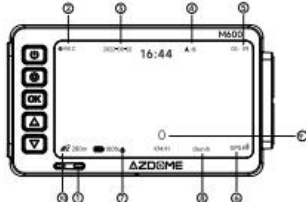

- [illegible]

 Същезателен интерфейс

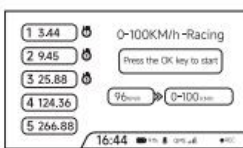

Режим на влизане: Натиснете дъг обутаната гре под екрана на камерата, за да влезете бързо с съответния интерфейс.

5 данни: Тези данни могат да записват 5 ускорения от 0-100 км/ч.

Използване на бутон OK: В случай на бързо шофиране, можете да използвате бутон OK: Натиснете кратко бутон OK, за да започнете състезание/натиснете дълго бутон OK, за да изтриете текущите данни.

Уводна информација за модул 1: Предоставя текущи данни за скоростта на реално време.

Введение в Модул 2: Предоставя цялостната картина от началото на едно съжителстване до текущото събитие.

Independent Racing Interface



мерга, за да влезете бързо и независимо имия интерфейс за скорост.

зависимциферблат показват текущата скорост на мотоциклета.

Целокупни GPS надморека височина

Предоставяте данни от компаса.

По-горе текущата ескадрила ширина и дължина на моста по отношение.

Честос рещо отстраняване на неизправности

1. Рекордите не се вклопа во следващите:
 - Многу, проверете дали мотоциклетот е вклучен и дали линија таа е вградена правилно
 - Погор, мотачот од видот е блокирано во време на употреба
 - Проверете дали е задржан на нивник кага воманоматот е тркача зачитане наг равнатица та.
 - Видео-фотите не се вклопувач.
 - Проверете дали наскот е тркача за равнатица наг равнатица та е вклучена ако е, задрате чувствителност на равнатица наг равнатица та е вклучена ако е.
 - Стем -Начините бутана заупување наг забрзати лог за дреститириге принудително рекордра.
 - Не мазиач: следовари не.
 - Формитириге ТФ кага дреститириге запис ваодностројство, проверете дали интериерот на кабел на кажерице е рах: лаче.

AZDOME

Name: Motorcycle Dashcam
Company: Shenzhen Lingdu Automotive Electronic Technology Co., LTD
Address: 28-29 / F, Unit 1, Building 1, 1211 Guangang Road, Longhua District, Shenzhen
Service tel: 400-013-0518
Website: www.azdome.com

Manufacturer: Dongguan Lingdu ELECTRONIC Technology Co., LTD
Address: 1 Chenglong Street, Qingxi Town, Dongguan City, Guangdong Province, China
The enterprise has passed ISO9001 quality system certification

The picture on the package is for reference only, please refer to the actual product

APP Operation Guide

This product comes with WIFI hotspot function, can realize the interconnection between host and mobile phone without using mobile phone traffic

Step 1: Download the APP in the mobile app market (see the QR code for Android and Apple)

Step 2: Enter the setting screen and turn on the WIFI switch (or long press the setting shortcut key on the video preview screen to enter the WIFI mode)

Step 3: Turn on the WIFI function of the mobile phone and find the WIFI name with LNDUXXXX for connection. The password is "12345678".

Step 4: Open the mobile APP to realize the wonderful interaction between the host and the mobile phone.

Key and Function

Key and Function		
Button Image	Short Press	Long Press
	On a short press into black screen mode, short black screen mode according to light up the host	Boot mode into shutdown mode, shutdown mode into the boot mode
	No video state switch (real-time camera interface - powerful, fast real-time camera interface long press set key panel - host Settings) interface video switch state is invalid	Long press the setting key on the real-time camera interface to play quickly Panel - host Settings) interface video switch state is invalid. Open WIFI, that host WIFI can be searched
	After selecting the target function, the OK option/real-time preview interface will be implemented to stop recording and start recording	
	Selected interface implementation functions	Long press to enter the speed display interface, long press the selected interface again to realize the scroll down function to enter the racing interface, and long press again to enter the Image head real-time picture mode
	Select the interface to realize the down-scroll function	

APP download

IOS



Android



Notice

CE This product complies with the radio interface requirements of the European Community.

W This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate and recycling helps protect natural resources, human health and the environment. For more information on disposal and recycling of this product, contact your local municipality, disposal service, or the shop where you bought this product.

FC Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

 
Motorcycle Dash Cam (M600)

Manual



AZDOME

Product Instruction

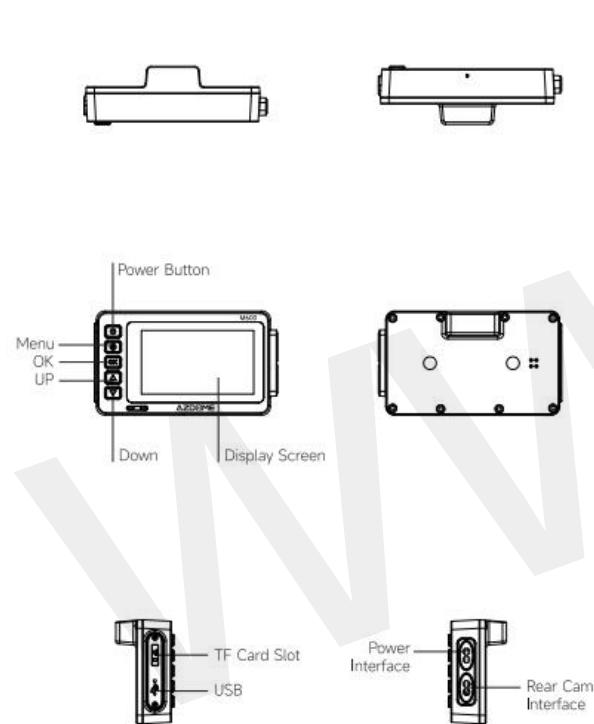

Production specification

Name	Specification
Model	M600
Size	106,4mm*61,2mm*33,6mm
Video Resolution	1080P
Screen	3.0
GPS	GPS/Beidou Dual Mode
Compass	GPS Compass
Battery	Build-in Battery
Lens Angle	121°
Aperture	F1.8
Vedio Format	MP4
Photo Format	JPG
Memory	TFcard(Max Support 512GB)
WIFI	Surport
Sensor	Gravity sensor , High precision altitude
Voltage	5V
TPMS	Optional
The BSD algorithm	Chip independent algorithm
Working Temperature	-10°C~65°C

Packing List

Check the box for each of the following items before installing the dash cam.



 
Product Tips

- This product belongs to the motorcycle driving recorder, can adapt to a variety of extreme copying environment, but please avoid alcohol, grease and other chemicals to avoid damaging the waterproof structure.
- This product supports IP67 waterproofing, but avoids direct washing by high pressure water gun.
- Before installing this product, turn off the motorcycle power supply, find the best position, fix the machine, and then turn on the ACC motorcycle power supply.
- This product adopts the storage mode of cyclic recording. If there are important files to save, please clean the TF card video regularly.

Installation Instructions




Wiring Instructions

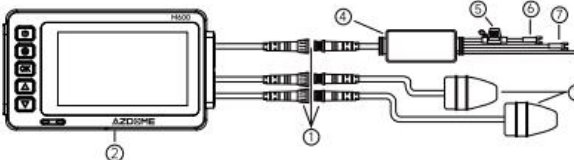


- Align the card slots and close them when connecting peripheral accessories
- M600 Host
- Front and rear cameras (The short line is the front camera, and the long line is the rear camera)
- Power Pack
- Fuse
- Red is ACC power supply positive
- Orange is the ACC power supply
- Black is the negative terminal of the power supply

M600 Interface Operation Description

 - The left side of the indicator is on, indicating that the machine is powered on. If the light on the right is on, the recording status is enabled and the blinking red light is recording
- Loop recording
- Date display (Will be updated automatically when GPS is in place)
- Location latitude and longitude display (automatically updated after GPS positioning)
- Current recording file time progress
- The current GPS signal
- Recording Status
- The maximum speed during the startup process
- Real-time speed display
- Elevation display

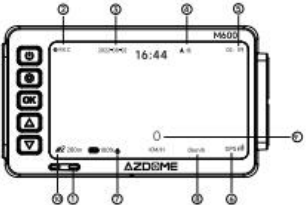


Racing Interface

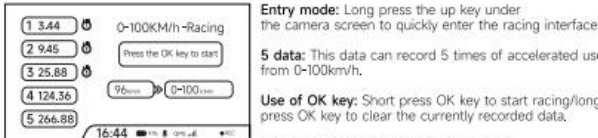 

Entry mode: Long press the up key under the camera screen to quickly enter the racing interface.
5 data: This data can record 5 times of accelerated use from 0-100km/h.
Use of OK key: Short press OK key to start racing/long press OK key to clear the currently recorded data.
Module 1 Introduction: Provides current real-time speed data.
Module 2 Introduction: Provides the total displacement from the beginning of a single race to the current occurrence.

 Independent Racing Interface

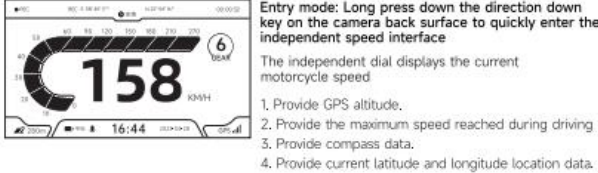

Entry mode: Long press down the direction down key on the camera back surface to quickly enter the independent speed interface
The independent dial displays the current motorcycle speed
1. Provide GPS altitude.
2. Provide the maximum speed reached during driving
3. Provide compass data.
4. Provide current latitude and longitude location data.

Common Troubleshooting

- The recorder is not turned on after loading
- Please check whether the motorcycle is powered on and the line is connected properly.
- Most of the video is locked during use
- Check that the gravity sensing Settings are set to the lowest possible setting.
- The video file is not locked
- Check that the gravity sensing setting is turned on, and if it is turned on, turn the gravity sensing sensitivity to a higher level.
- Crash
- Press the reset button on the back of the body to forcibly restart the recorder.
- No recording after open
- A formatted TF card and recorder restart, check whether the camera cable interface loose.