


Ръководство за употреба

M330

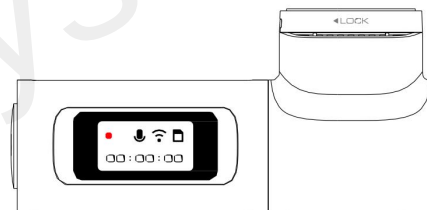

AZDOME

www.azdomes.com

Насладете се на интелигентен живот

Индекс

1. Обслужване на клиенти	2
2. Важна информация за безопасност.....	3
3. В кутията.....	5
4. Спецификации.....	6
5. Диаграма на продукта.....	7
6. Първи стъпки	9
7. Инсталиране.....	11
8. видео използване на смартфон	14
9. Общи настройки	23
10. използване на компютър	30
11. Актуализация на фърмуера.....	31
12. Гласови указания.....	33
13. ЧЕСТО ЗАДАВАНИ ВЪПРОСИ.....	33
14. Известия	35

1. Обслужване на клиенти



service@azdome.hk

Отговор само за 12 часа



Забележка:

1. Необходима е U3 microSD карта , за да използвате тази видеорегистратор (не е част от доставката). Форматирайте microSD картата заедно с видеорегистратора за първи път. за захранване. Тип на кондензаторът е вграден в (използва се за съхранение само литиево-метална батерия о 1mAh).

2.Важна информация за безопасност

че сте закупили тази видеорегистратор AZDOME.

Това ръководство за потребителя съдържа информация как да контролирате вашата камера за управление.

използване на камерата за това ръководство, управление, за да осигурите правилна употреба.

С цел подобряване на производителността на продукта, съдържанието на това¹
безплатно

- Не разглобявайте и не ремонтирайте продукта сами .
не редактирайте.

пожар, токов удар или неизправност. за обслужване
Това е за проверка и ремонт

-Ако чуждо тяло попадне в продукта, веднага
изключете захранващия кабел.

към услугата и поискайте ремонт.

-Регулирайте продукта по време на шофиране.

Това е злополука. спрете или паркирайте автомобила при монтажа и
настройката на продукта

- Не инсталирайте продукта на място, където може да пречи
в зрителното поле на водача.

Това е злополука.

-Не използвайте повредено или модифицирано захранване.
кабел. Използвайте само кабели, предоставени от производителя.

Повредените или модифицирани захранващи кабели могат да причинят
експлозия, пожар или неизправност.

- Не пипайте продукта с мокри ръце.

Това е токов удар.

-Не инсталирайте продукта в среда с висока влажност или
запалими газове или течности.

Това² може да доведе до експлозия и/или пожар.

- Не оставяйте продукта близо до бебета, деца или домашни любимци.
животни. Съществува риск от поглъщане на малки и/или

тяхната слонка попада върху продукта, което причинява външна експлозия.
в съединение.

-Когато почиствате вътрешността на автомобила, не пръскайте вода или вакса директно
върху продукта.

то пожар, токов удар или неизправност.

-Ако захранващият кабел излъчва дим или има миризма
необичайна миризма, изключете го незабавно.

Свържете се с вашия сервизен център или вашия дистрибутор.

- Поддържайте клемите на захранващия кабел чисти.

IN да се случи и огън.

-Използвайте правилното входно напрежение.

IN може да възникне експлозия, пожар или неизправност.

- Свържете захранващия кабел здраво, така че да не може да бъде издръпан.
лесно за изключване.

IN може да възникне пожар.


- Не покривайте продукта с никакъв материал.

Това може да причини деформация на продукта или пожар. Продукт и
периферен използвайте върху

3. В кутията

чрез инсталиране на камерата за
управление на следните елементи.

за всеки от



камера x1



Електростатични фолиа x2 бр



Тип-С зарядно за кола с 3,5 м/
12 фута кабел x 1



Скоби за кабели x 5
x 1



Потребител

x 1




Забележка:

1. За да се подобри работата на продукта, съдържанието на това
без

4. Спецификации

Модел	M330
Апертура	F=1,8
Цвят	черен
език	/ японски / немски / френски / испански / италиански /
Карта с памет	Micro SD карта клас 10, U3 скорост, максимална поддръжка 128 GB (не е включена)
Видео код	H.264
Формат на снимката	JPG
Видео компресия Режим	MP4
Видео резолюция	1920 x1080P 30 кадъра в секунда
WiFi	Вградена
Батерия	Вграден суперкондензатор
Интерфейс за захранване	5V/1A
Работна температура	-20°C до 70°C (-4°F до 158°F)

5. Диаграма на продукта

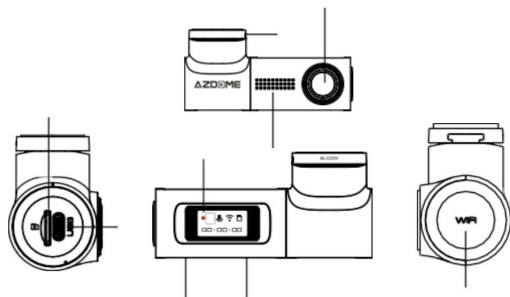

#	Описание
1	поставка за стикери
2	обектив
3	Слот за Micro-SD карта
4	USB Type-C порт за зареждане
5	WiFi ключ Кратко натискане: Двойно щракване: Продължително натискане (3s): Заклучване на видео Продължително натискане (8 секунди): Форматиране и възстановяване на настройките по подразбиране.

карта и

6	Говорител
7	0,96-инчов дисплей
8	Микрофон
9	Бутон за нулиране



Индикатор за памет
карти
WiFi индикатор
Време за аудио
запис



Забележка:

По време на нормален запис се показва часовникът, докато
По време на спешен запис се показва дължината на записа
на видео сегмента.

	Цвят	състояние
ЗАП	 Blinking	Записване на обикновен видеоклип
	 Blinking	Записване на записано видео

6. Да започваме

Камерата е проектирана да се включва автоматично и да записва, веднага щом получи захранване. След това записва видеото и автоматично изключва изключването на автомобила.

1. Автоматично включване/изключване:

Включете го в контакта на автомобила цигари. Когато двигателят е и камерата автоматично ще се включи и ще започне да записва.

След завъртане на ключа в позиция ЗАКЛЮЧЕНО, записът автоматично се запазва и се изключва.

2. Ръчно включване/изключване

включване: веднъж захранване.
изключване: и задръжте захранване за период от 2 секунди.



1. Необходима е U3 microSD карта (не е включена) за използване на тази видеокamera.

Форматирайте microSD картата карта
заедно с видеорегистратора за първи път.

2. ВИНАГИ използвайте към захранване. Тъй като е в вграден суперкондензатор (да запомните се използва само литиево-метална батерия о 1mAh).

3. Видеорегистраторът автоматично се актуализира, когато към ПРИЛОЖЕНИЕТО AZDOME на вашия телефон WIFI.

4. U камиони/пътнически автомобили 12V
гнездото за запалка е винаги ГОРЕЩО, което означава, че е постоянно захранвано дори когато е изключено и вашето превозно Ако е така средство, след това колата

Функцията ВКЛ./ИЗКЛ. няма да работи. И ако оставите камерата запишете, когато колата е изключена, тогава ще изтече вашата батерия а може и да нямате достатъчно енергия, за да запали колата със свирка. Към тази ситуация лекарство, направи едно от двете неща:

вашата камера за управление към кутията с предпазители автомобил като автоматичен комплекти.
използвайте Change в кутията с предпазители 12V гнезда на гнездо, който доставя само енергия от автомобила до позицията АСС или ON.


7. Монтаж

Инсталирайте камерата отзад
всички чужди

и

и суха


монтаж
стъкло.

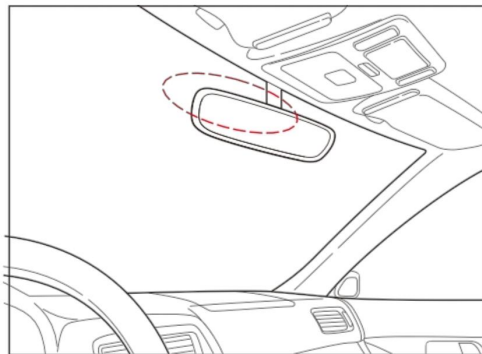

1. щракне на картата в слота, докато моторът
място (използвайте високоскоростна micro-SD карта 10 или по-висока).

2. на стъкло подходящо място, което не пречи В
оглед, и на инсталирането на чужд И
и електростатичен защитен слой
стикери за електростатичен стъклен стикер,
стъкло и за предотвратяване образуването на на стъкло след нея

3. Отлепете защитното фолио от двустранната лента и регулирайте ъгъла на
обектива на електростатичната камера.

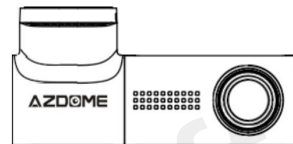


4. Включете захранващия кабел на
запалката и

цигара в контакта
асансьор

ръбове

стъкло и


захранващ кабел.

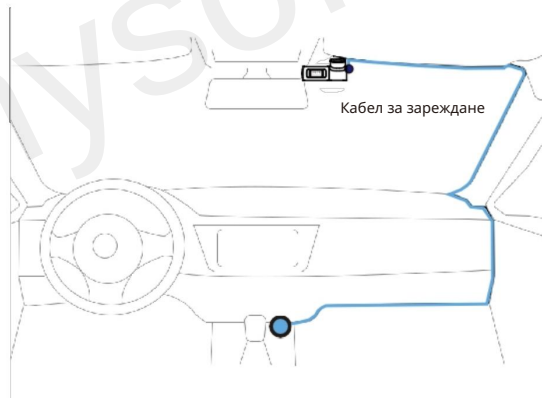

5. Камерата ще се включи и ще записва. Видео файловете се записват на картата на двигателя. камера автоматично


с.

записва и се изключва

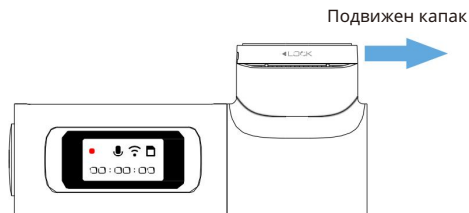

8. Възпроизвеждане на видео файл с помощта на

8.1 Проверка на видео в реално време с помощта на смартфон

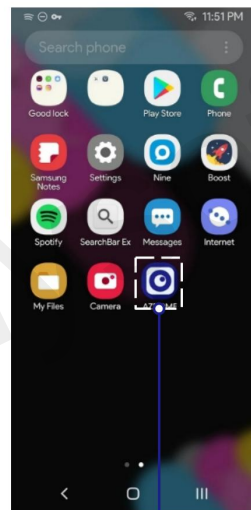

1 Потърсете AZDOME


приложения в магазина на Google Play или Apple App Store и инсталирайте го във вашия смартфон.

Download on the
App Store




GET IT ON
Google Play



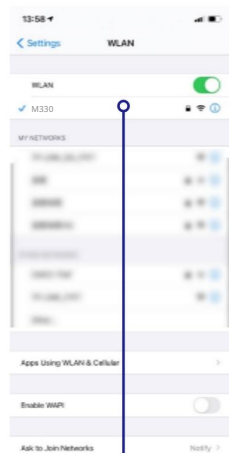


2

Отидете на Настройки на телефона > WiFi > Изберете Dash Cam WiFi. След свързване с WiFi ще се появи съобщението „Няма интернет връзка“, което е нормално, тъй като WiFi камерата е CAMO за функция за предаване на видео/снимки, игнорирайте тази подкана за WiFi SSID: M330_***** ПАРОЛА по подразбиране: 12345678.

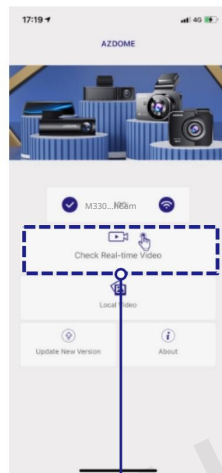

3


Моделът на камерата M330 ще се покаже, когато се свърже успешно. Натиснете бутона "Проверка на видео на живо", за да видите визуализация на видео на живо.

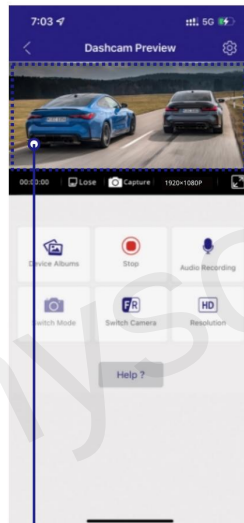

4

Cera гледайте записания видеоклип истински след смартфон до


Wi-Fi Direct.

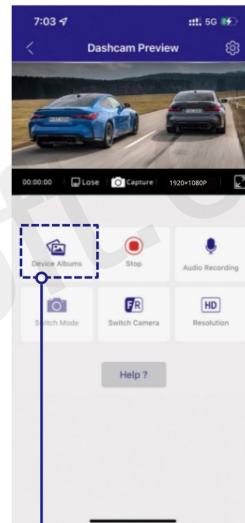


5

Моля, първо спрете записа и след това върнете устройството ". за получаване на снимки, видео, спешни файлове .

8.2 Изтеглете видео файлове на вашия смартфон

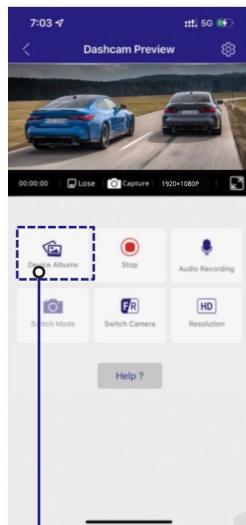

Отидете до интерфейса за визуализация на камерата за управление. Първо спрете записа, след което натиснете "бутона „Албум на устройството“, за да извлечете снимки, видеоклипове и спешни файлове.

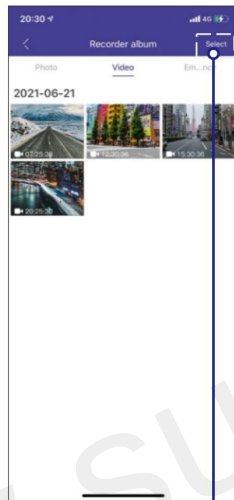

Изберете видео файловете, които искате да изтеглите на вашия смартфон



Натиснете иконата, за да изтеглите видео файлове, но ще отнеме известно време, за да изтеглите един видео файл.



След това можете да намерите тези изтеглени видео файлове в менюто на оригиналния интерфейс на APP, наречено „Изтеглен файл“.

Приложението няма да показва видео на живо на вашия телефон. Дисплей

само снимка на плажа?

Мобилните че видеото на живо няма да се показва. Ако APP



данни не показват видео на живо, мобилни данни "AZDOME" в
вашия телефон. че локалният „AZDOME“ е включен.

1. За iOS: „Безжични данни“

Изберете „WLAN“.

2. За по-стари iOS: SettingsAZDOMEsable

„Мобилни данни“.

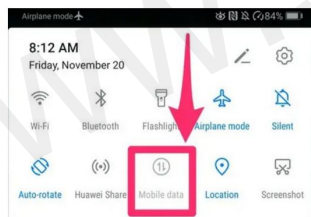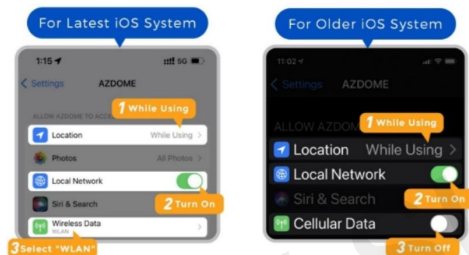

Забележка:

1. Функцията WiFi Direct на телефона до WiFi в рамките на 10 фута.
2. След към ПРИЛОЖЕНИЕТО AZDOME се актуализира автоматично изтичане
- на датата и 3. AZDOME е налична за с Android 5.0 и по-високи или iOS 9.0 и по-нови.

Какво представлява функцията WiFi?

WiFi функцията е проектирана така, че да можете да използвате камерата за управление

сдвоете с вашия смартфон и незабавно за запис от видеорегистратора. Лесно за разглеждане тук, Изтеглете и споделете видеоклиповете си със семейството си. сякаш ти

Bluetooth колонка за смартфон за безжична връзка музика, автомобилните регистриatori също използват WiFi сигнал (вместо Bluetooth), за да сдвоите вашия смартфон с AZDOME M330.

Мога ли да гледам видеоклипове около колата си дистанционно?

НЕ Видеорегистраторът AZDOME M330 НЕ е за излъчване облак или интернет. Това НЕ е облачна услуга.


нито IP камера и НЕ е възможно да В ПРИЛОЖЕНИЕТО за получите видео на живо и обхват от 10 фута видеорегистратор, ако от камерата на таблото.

Какъв е обхватът на WiFi?


Обхватът на WiFi сигнала 10 фута, ако не са като домашен WiFi, е тогава обхватът на WiFi е 10 фута от никакъв, нямате WiFi сигнал извън дома, толкова малък

За телефони с Android:

По време на инсталирането на приложението AZDOME изскачащи прозорци „използване ще бъдете подканени: изберете опцията на приложението“, за да позволи на приложението достъп НАЧАЛО до местоположението на това и изберете опцията за „Разрешете“ приложението AZDOME на снимки и медии вашия За първи път ще трябва още една стъпка. след към WiFi мрежата M330 показва съобщението „No Интернет“. Което е за около 10-15 секунди, докато няма да покаже изскачащия прозорец или известието по-долу. докоснете изскачащото известие, което се появява след секунди, и изберете да продължите, дори когато не е налично няма наличен интернет. След като изберете тази опция, OK

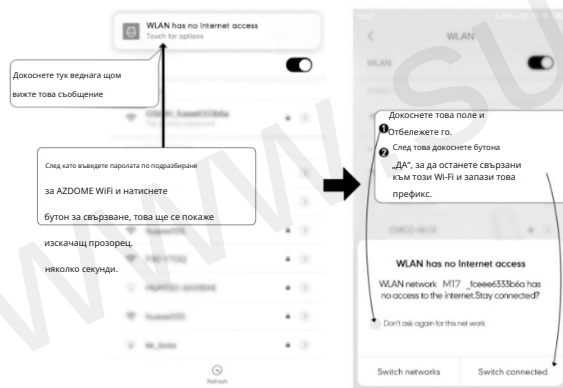

За iPhone:

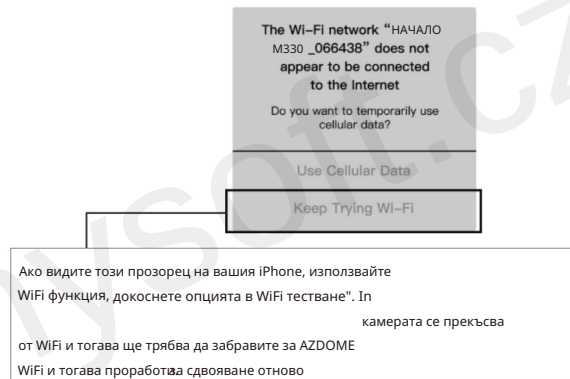


8.3 Форматиране на Micro-SD картата

Има два формата на Micro-SD карти

1. Натиснете и задръжте WiFi за повече от 8 секунди и ще се възстанови до фабричните настройки и форматирайте картата. След форматиране на екрана ще се появи съобщение за свързване към WiFi на тази

видеорегистратор 2 . приложение AZDOME APP и след това в на настройки вдясно горния ъгъл на страницата за визуализация в къде да намеря реалното меню за форматиране на този раздел.

9. Общи настройки

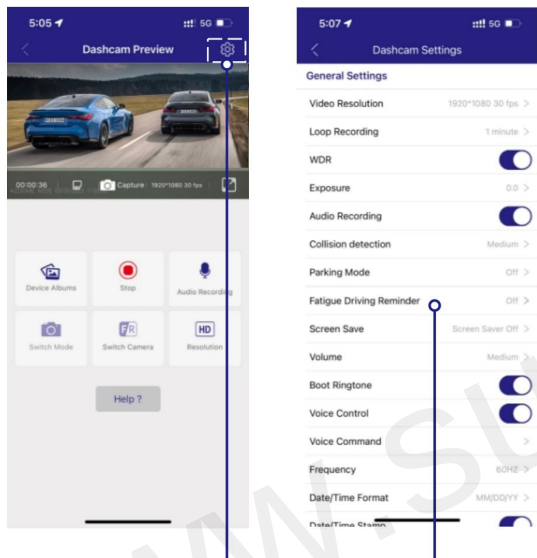

Отидете до интерфейса за визуализация първо спрете записа и след това натиснете иконата за настройки.

Изберете какво искате да зададете.

9.1 Видео настройки

Видео резолюция

Видео разделителната способност на тази камера е 1920 x1080P 30 кадъра в секунда.

Циклично записване - 1 мин/3мин(по подразбиране)/5мин

За запис за минути.

изберете дължината на всеки видеоклип (1/3/5 запис на

Тази функция е видеорегистратор.

че след картите

Видеорегистраторът автоматично ще изтрие най-старите файлове до направи място за нови записи. Това означава, че при запис без

WDR - включено (по подразбиране)/изключено

WDR означава "широк динамичен обхват", което означава това Камерата или дисплеят могат да обработват сцени с големи разлики в яркостта и дисплея на тъмно и области.

Експозиция $-3.0/ -2.0/ -1.0/ +0.0$ (по подразбиране) $+1.0/ +2.0/ +3.0$

Регулирайте настройките на експозицията на видео според вашите предпочитания.

или по-тъмен видеоклип

Аудиозапис - включен (по подразбиране)/изключен

Видеорегистраторът има

микрофон за запис на аудио с видео. Заглушаване на записа на видео.

G-сензор - Изключено / Ниско / Средно (по подразбиране) / Високо

G-сензорът е физическо откриване на удар и

акселерометър

включете видеорегистратора. Веднъж G-

сензор

в

физ

или включете камерата, текущият видео файл ще бъде
като спешен файл, за да не е функция
мощността Колкото по-висока е чувствителността на G-сензора, толкова по-малка е
на щипката ще бъде За автоматична защита на файла.

Режим на паркиране

Тази функция ще работи CAMO ако е инсталиран 3-проводен
кабелен комплект. Този режим на паркиране има
на опции.



Забележка:

За да използвате тази нова функция, е необходим специално проектиран JYX05

Type-C 3-Lead Hardwire Kit. Не е в Amazon: [JYX05 Type-](#) опаковка,

[C 3-Lead Hardwire Kit за](#)

[Видеорегистратор M330](#)

*Свързан режим на паркиране:

1. Когато изключите двигателя и до позицията Тогава
камерата СПИРА за запис на видео и автоматично записва
към режима 1 кадър в секунда.
2. Ако удрия колата ви и ударът стига до сета
G-сензор, камера записвайте 1 минута непрекъснато
видео, записва и записва това видео в папката Събития > след което се връща към
1fps запис.
3. Следващият път, когато запалите автомобила, камерата автоматично ще го направи
режим на паркиране. След това автоматично към
нормален видео режим и започва видеозапис.

* Режим на паркиране с откриване на сблъсък:

1. Когато изключите двигателя на позиция Тогава
и камерата СПИРА видеозапис и към режима
разпознаване на удар и камерата ще се изключи.
2. Когато камерата в режим на откриване на удар, ако
удря колата ви и ударът стига до сета G-
сензор, камерата се включва > след това запис 1 минута
непрекъснато видео, запазва и записва това видео в папката Събития > след което
камерата се изключва.
3. камерата автоматично ще се върне при следващото стартиране на автомобила
към нормален видео режим и започнете записване
видеоклипове.

*Нормален режим на запис при паркиране:

1. Когато изключите двигателя и на позиция
Камерата ще при нормален запис.
2. Сега камерата ще в режим на откриване на удар, ако
се сблъсне в колата ви и ако ударът достигне зададения G-сензор, камерата ще
заклучи текущия видеоклип и ще заключи този видеоклип в папката ще спаси
Events > тогава камерата ще при нормален запис.

Напомняне за умора при шофиране - изключено (по подразбиране)/ 2ч

Когато активирате тази функция, камерата за управление ще ви дава звуков
сигнал на всеки 2 часа, за да ви уведоми, че сте уморени. управление

Скринсейвър - скрийнсейвър

изключен (по подразбиране)/екранът се изключва след 1 минута

Изключен екран: Този екран винаги ще бъде включен.

Изключване на екрана след 1 минута: Екранът се

изключва след 1 минута.

Сила на звука - Изкл. / Ниска (по подразбиране) / Средна / Висока

Тази звукова комплект обем

функция , звук на подканата вътрешни

на високоговорителя на камерата.

Мелодия при стартиране - Вкл.(по подразбиране)/Изкл

Тази функция включване/изключване поканен

на камерата.

Гласов контрол - включен (по подразбиране)/изключен

Поддържа само включване на изображение, изключване

запис, WiFi изключен, WiFi, запис, видеоклипове



Забележка:

че функцията за гласов контрол има 90% и

за активирание в

околните Така че, ако тази функция

деактивирате в менюто с настройки в ПРИЛОЖЕНИЕТО AZDOME.

Гласова команда

Кажете • но поддържа само английски

За да включите Wi-Fi, Включете WiFi

• За да изключите Wi-Fi, Изключете WiFi

• За да направите снимка, Направете снимка

• За да заключите текущите видео файлове, видео.

Заклучване

• За да започнете запис, • За да Отворете записа

спрете записа, • За да екранирате, Изключете записа

Отворен екран

• За да изключите екрана, Изключете дисплея.

Честота - 50 Hz / 60 Hz (по подразбиране)

Тук трябва да изберете честотата според спецификацията на захранването използвани във вашата страна на вашето местоположение.

Формат за дата/час

Тази функция изберете формат на датата.

9.2 Видео печати

Дата/час

Включете/изключете показването на дата/час на записани файлове.

ЛОГО

Включете/изключете печата на логото на AZDOME, показван при качени файлове.

Модел

Включете/изключете печата на модела, показван върху качените изображения файлове.

система като

синхронизация

Синхронизирайте

телефон с тази видеорегистратор M300.

www.sunnysoft.cz

Безплатно съхранение

Вижте оставащото място на картата с памет.

Форматиране на SD карта

Процесът на форматиране гарантира, че форматът на файловата система е картата е оптимизирана за камерата.



Забележка:

Забележка: За стабилна работа сменяйте формат картата на всеки 1-2 пъти

WiFi име

Тук WiFi име в APP, стойността по подразбиране е име: M300*****

WiFi парола

Тук Парола за WiFi в APP, парола по подразбиране: 12345678.

Настройки по подразбиране

Възстановете настройките по подразбиране на камерата за управление. Вашите записи

те няма да го направят


Версия на фърмуера


Тук е проверете текущата версия на фърмуера инсталиран в камерата. Ще намерите тази информация в в бъдеще, за да проверите дали е наличен

10. Възпроизвеждане на видео файл с помощта на

1. microSD карта от видеорегистратора.
2. Поставете картата в microSD карти и тя да
брой.

3. В зависимост от твърди дискове бихте
да може да намери флашка като устройство
"D", "E" или под друго име. След търсене на устройството,
два пъти и ще получите към компонентите който
включват папки Normal, Event и Photo. Нормален Нормалният режим на
запис записва видео файлове в тяхното място за съхранение.
Събитие В режим на запис на събитие видео файлът в
ще бъде
и
чрез изтриване с помощта на функцията за запис в Снимка Това е
папка за съхранение снимки.
Ако искате видеоклипове Щракнете двукратно върху п.
използване VLC Media Player, който може да
бъде изтеглен безплатно от: www.videolan.org.

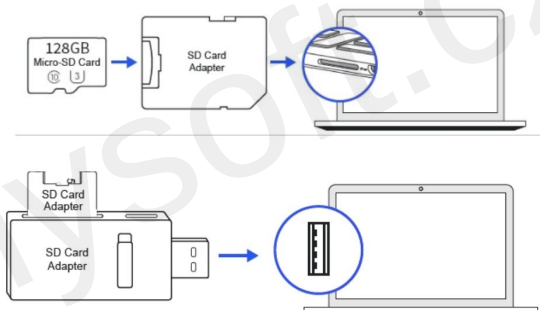

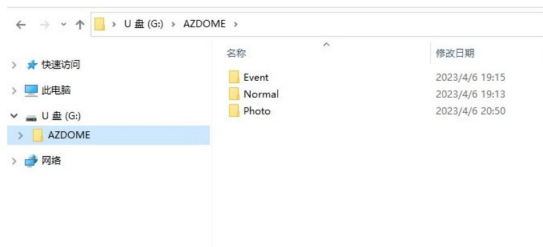


Файл с име *****.MP4 = Видео файл от

регистрационни камери

11. Актуализация на фърмуера

1. microSD карта от видеорегистратора.
2. Поставете картата в microSD карти и я към компютъра.

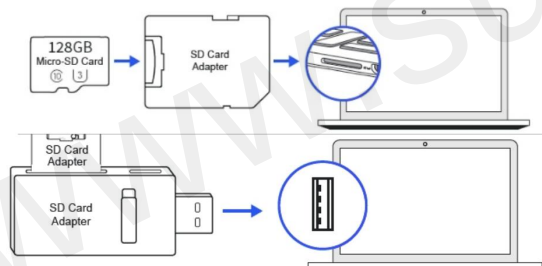

3. M330 фърмуер от www.azdomes.com

> Поддръжка > Изтеглени файлове на вашия компютър.

4. Разархивирайте изтегления фърмуер (Zip файл) и копирайте файла фърмуер с име "*****.bin" към картата

microSD.

5. камера, за да в колата и процес

актуализирате фърмуера. Трябва да видите лента за напредък

актуализация, което означава вашата камера за управление M330

актуализира нов фърмуер.

Актуализация на фърмуера отнеме до 1 минута. моля

че актуализация на фърмуера няма да се случи

изключване на захранването. След актуализиране на фърмуера, камерата автоматично се изключва.

6. версия на фърмуера включете и се регистрирайте

Настройки на APP > Версия на фърмуера.

12. Гласови указания

Бърз глас	Описание
Аварийно видео	запис веднага щом G-стартира сензор
WiFi ВКЛ	По подразбиране ВКЛ., след включване че е така то
WiFi изключен	Натиснете и задръжте Fi за 3 s се изключва, Wi-to.
Грешка в картата с памет	Лоша/погрешна/фалшива памет карта
Започнете записа	След като включите поканен и/гласнете приложението, то
Записът е спрял Контрол	приложение, то
Звучи като "Щракване"	изображение с помощта на приложението, него
Успешно форматиране. Успешно форматиране	карти
Форматът е неуспешен	Форматиране картите са неуспешно
Режимът на паркиране е включен	Режимът на паркиране е включен
Режимът на паркиране е изключен.	Режимът на паркиране е изключен

13. НАЙ-СИГУРНИТЕ ВЪПРОСИ

Q1: Камерата включва ли се/изключва се автоматично?

че изходният ток към колата. достигнете 5V/1A и използвайте нашият

Въпрос 2: Видео изображението е размазано?

защитен филм и че е така
стъкло без мазнини, и

Q3: Камерата се нагрява?

Нормално е камерата да се нагорещи по време на употреба, тъй като видеото се записва с висока скорост, камерата на регистрационното устройство може да се нагорещи по време на употреба. (Не повече от 158°F/70°C).

Въпрос 4: Видео файловете не могат да се възпроизведат на моя компютър?

Видео файловете от видеорегистратора са във формат MP4 и може да не са съвместим със ако не е инсталиран правилно софтуер за

Въпрос 5: Видео не издава звук?

Уверете се, че настройката „Запис на аудио“ е включена.

Въпрос 6: Видео е размазано?

Dash Cam има минимално фокусно разстояние от метри. Обектите, които са по-близо от тази стойност, ще бъдат

B7: Гласова подкана Грешка в паметта?

Използване на нееквалифицирани SD карти или карти
повлияе на работата на камерата за
управление и камерата за управление ще рестартира записа. Ако
да работи, би било около
нееквалифицирана TF карта, която отговаря на изискванията за
запис на видеорегистратор. свържете се с нас и вземете нов
карта.

СЪДЪРЖАНИЕ

14. Уведомяване

CE Този продукт Европейски изисквания
към радио интерфейс.



Този символ означава, че продуктът не трябва да се изхвърля.
като домакински отпадък и трябва да се рециклира, за да помогне
за опазването на ресурсите, човешкото здраве и околната среда.

Допълнителна информация относно изхвърлянето и рециклирането на този продукт
налични в местната общинска служба

откъде закупихте този продукт?
FC или модификации, които не са одобрени
от за съответствие, може да доведе до

потребителя за работа

Това е тествано и е установено, че отговаря на цифровите B 15 за
правила на FCC. Тези ограничения са предназначени да осигурят разумна защита
срещу вредни смущения в жилищна инсталация. Това генерира, използва енергия и,
ако не е инсталирано и използвано в съответствие с инструкциите, може
да причини вредни смущения в

радиокомуникациите. Въпреки това, няма гаранция, че няма да възникнат
смущения при определена инсталация.

Ако този вредни смущения в радио или
телевизор което може да се определи чрез изключване и
включване на потребителя, за да се опита да елиминира смущението с един
или повече от следните или
-- антени.
-- разстоянието между и получаваме.
-- в контакт във верига, различна от тази, към която
е
-- Консултирайте се с вашия дилър или опитен техник
радио/телевизия.


Това е изискване на 15 правила на FCC. Операция
при следните условия: (1) това не може да причинява вредни
смущения и (2) това трябва
приемете всякаква намеса, намеса, която може да причини нежелана работа.

Това FCC граници на експозиция за неконтролирано Това определен
трябва да се инсталира и работи на минимално разстояние бди
от 20 cm
между и вашата. Това не трябва да се използва заедно с друга антена
или

Дистрибутор
Sunnysoft sro
Кованечка 2390/1a
190 00 Прага 9
Чехия
www.sunnysoft.cz

User Manual

M330

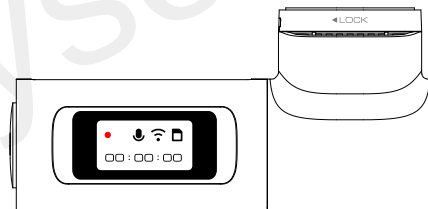

AZDOME

www.azdome.com

Enjoy Your Smart Driving

Index

1. Customer Service.....	2
2. Important Safety Information	3
3. In The Box.....	5
4. Specification.....	6
5. Product Diagram.....	7
6. Getting Started	9
7. Installation	11
8. Playing Video Files Using Your Smartphone	14
9. General Setting.....	23
10. Playing Video Files Using Your Computer	30
11. Firmware Update.....	31
12. Voice Prompts	33
13. FAQ.....	33
14. Notice	35

1. Customer Service

-  Defective or damaged item?
Inaccurate description?
Missing parts or accessories?
Performance or quality not adequate?
Wrong item was sent?

 **service@azdome.hk**
Response in just 12 hours

Contact us before returning the item.
We will help you resolve any issue asap.

Note:

1. **A U3 type microSD card (Not included)** is required to use this Dash Cam. Be sure to format your microSD card with your dash cam for the first time use.
2. Please ALWAYS connect with power when using. As it is built in Super Capacitor (Only has a 1mAh Lithium Metal Battery used to memorize time).

2. Important Safety Information

Thank you for purchasing this AZDOME dashcam.

This instruction manual contains information on how to operate your dashcam.

Before using your dashcam, we recommend that you read through this manual to ensure correct usage.

To improve the performance of the product, the contents of this manual are subject to change without prior notice.

·Do not disassemble, repair, or modify the product yourself.

Doing so may cause fire, electric shock, or malfunction. For internal inspection and repair, contact the service center.

·If any foreign matter gets inside the product, detach the power cord immediately.

Contact the service center for repair.

·Do not adjust the product while driving.

Doing so may cause an accident. Stop or park your car in a safe place before installing and setting up the product.

·Do not install the product in a location where the product can interfere with the driver's field of vision.

Doing so may cause an accident.

·Do not use a damaged or modified power cord. Only use the cords provided by the manufacturer.

Damaged or modified power cords may cause an explosion, fire, or malfunction.

·Do not operate the product with wet hands.

Doing so may cause electric shock.

·Do not install the product in an environment with high humidity, or combustible gases or liquids.

Doing so may cause an explosion and/or fire.

·Do not leave the product near infants, children, or pets.

There is a risk of them swallowing small components, and/or their saliva may get into the product, causing an explosion due to a short circuit.

·Do not spray water or wax directly onto the product while cleaning the inside of the car.

Doing so may cause fire, electric shock, or malfunction.

·If smoke or an unusual smell is emitted from the power cord, detach the power cord immediately.

Contact the service center or your distributor.

·Keep the terminals of the power cord clean.

Failure to do so may cause excessive heat and fire.

·Use the correct input voltage.

Failure to do so may cause explosion, fire, or malfunction.

·Plug in the power cord firmly so that it cannot easily be disconnected.


Failure to do so may cause fire.

·Do not cover the product with any material.


Doing so may cause external deformation of the product or fire. Use the product and peripherals in a well-ventilated location.

3. In The Box

Check the box for each of the following items before installing the dash cam.



Dash camera ×1



Electrostatic films ×2




Type-C car charger
with 3.5m/12ft cable ×1



Cable clips × 5

Pry tool × 1



User manual × 1




Note:

1. To improve the performance of the product, the contents of this manual are subject to change without prior notice.

4. Specification


Model	M330
Aperture	F=1.8
Color	Black
Language	English / 日本語 / Deutsch / Français / Español / Italiano / Русский.etc
Memory Card	Micro SD Card Class 10 , U3 Speed, Max Support 128 GB (Not included)
Video Code	H.264
Photo Format	JPG
Video Compression Mode	MP4
Video Resolution	1920 x1080P 30fps
WiFi	Built-in
Battery	Built-in Super Capacitor
Power Interface	5V/1A
Operation Temperature	-20°C to 70°C (-4°F to 158°F)

5. Product Diagram

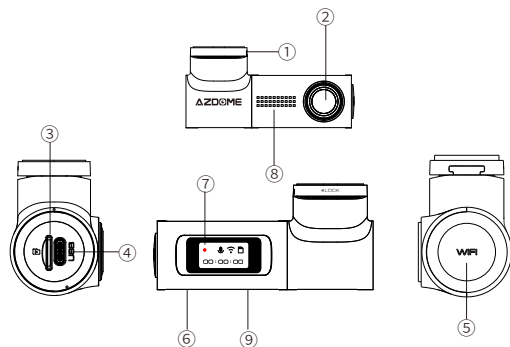

#	Description
1	Sticker mount
2	Lens
3	Micro-SD card slot
4	Type-C USB charging port
5	WiFi Key Short press: Turn on/off WIFI Double click: Turn on/off audio Long press (3s): Lock video Long press (8s): Format memory card and restore default settings.

6	Speaker
7	0.96 inch display
8	Microphone
9	Reset button

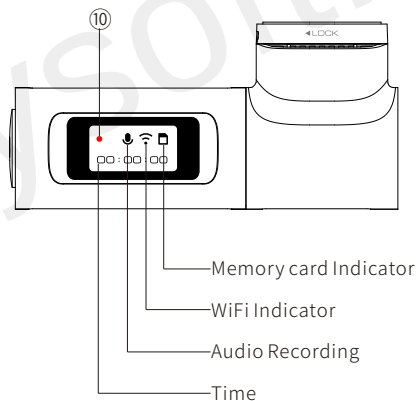

Note:

The clock is displayed during normal recording, while the recording duration of the locked video segment is displayed during emergency recording.

	Color	Status
⑩ REC	 Blinking	Recording normal video
	 Blinking	Recording locked video

6. Getting Started

The camera is designed to power up and record automatically when it receives power. Then saves the video record and turns off automatically when the car shuts off.

1. Auto Power ON/OFF:

Plug car charger to cigarette lighter socket. When the car engine is on, dash cam will turn ON and start recording automatically. When the car key is turned to LOCK position, dash cam automatically saves the recording and turns OFF.

2. Manual Power ON/OFF

Manually Turn ON: Press the power button once.

Manually Turn OFF: Press and hold the power button for at least 2 seconds.



Note:

1. A U3 type microSD card (Not included) is required to use this Dash Cam. Be sure to format your microSD card with your dash cam for the first time use.

2. Please ALWAYS connect with power when using. As it is built in Super Capacitor (Only has a 1mAh Lithium Metal Battery used to memorize time).

3. The dash cam will automatically update its time when it is connected to the AZDOME APP on a phone via WiFi.


4. Some trucks/cars's 12V cigarette outlet is always HOT, which means it provides constant power even when the car is turned off and locked. If this is the case for your vehicle, then the auto ON/OFF feature will not work. And if you leave the camera continuously recording when the car is turned off, then it will drain your car/truck's battery and you might not have enough power to start your car for next time. To remedy this situation, you can do one of the two options:

① Hardwire your dash cam to your car's fuse box with 3-Lead Auto Trigger Hardwire Kit.


② Change the connection in the fuse box for your 12V outlet to socket which only supplies power when car key is turned to ACC or ON position.

7. Installation


Install the front camera behind the rear view mirror. Remove any foreign matter and clean and dry the windshield before installation.

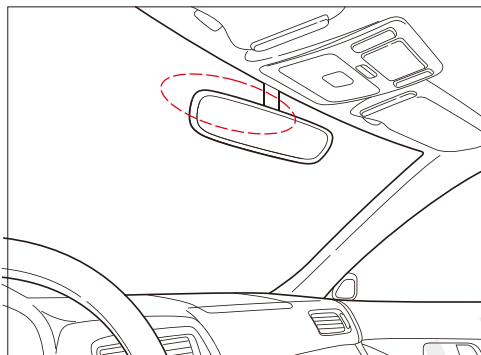


1. Turn off the engine, gently push the card into the slot until it locks into place. (Please using class 10 or above high-speed U3 micro-SD card)
2. Find a suitable place on windshield where don't obstruct the driver's field of vision and remove any foreign matter and clean and dry the windshield before installation. Tear off the protective layer of the electrostatic sticker and adhere the electrostatic sticker to the windshield to prevent mark/glue on your windshield after removing it.
3. Peel off the protective film from the double-sided tape and attach the front camera to the electrostatic sticker. Adjust the angle of the lens by rotating the body of the front camera.

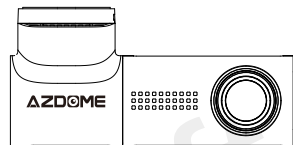

4. Plug the cigarette lighter power cable into the cigarette lighter socket and the front camera. Use the pry tool to lift the edges of the windshield trim/molding and tuck in the power cord.

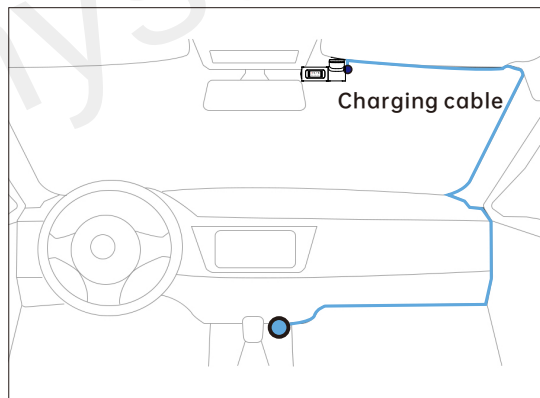


5. Turn on the engine. The dashcam will power up and start recording. Video files are stored on the microSD card. Turn off the engine. The dashcam will automatically stop recording and power down.

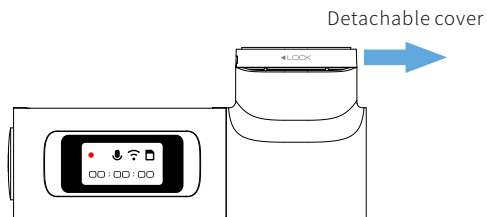


8. Playing Video Files Using Your Smartphone

8.1 Check real-time video using your smartphone

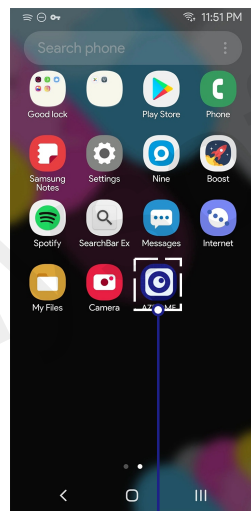


1 Search for the AZDOME app in the Google Play Store or Apple App Store and install it on your smartphone.




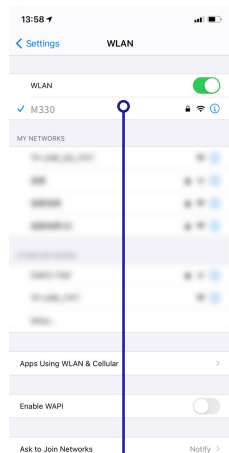


2 Go to Phone's Settings > WiFi > Select WiFi of the dash cam. After it's connected to the WiFi, it will say 'No Internet Connection' which is normal. Because dash cam WiFi is ONLY for video/photo transfer function, NOT made to broadcast footage over the cloud or internet, please ignore the prompt.
 WiFi Name SSID: M330 *****
 Default PASSWORD: 12345678

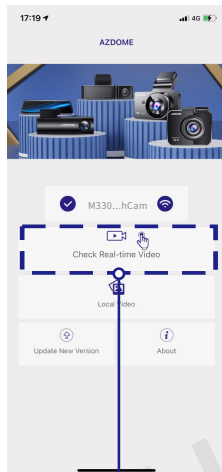

3 There will show dash cam model M330 when connect successfully. Press "Check Real-time Video" to live video preview interface.

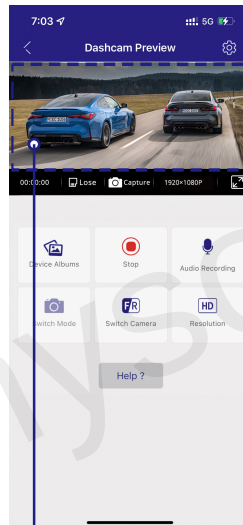


4 Now you can view the video currently being recorded real-time by connecting your smartphone to the dashcam via Wi-Fi Direct.

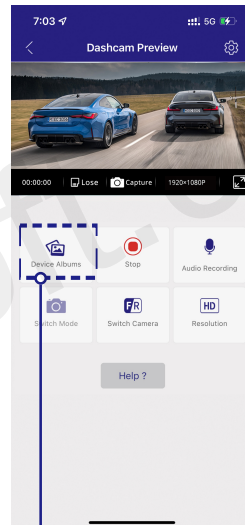


5 Please STOP recording first, then press the 'Device Album' to get Photo, Video, Emergency files.

8.2 Download the video files into your smartphone

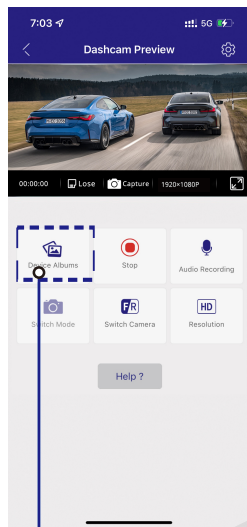


1 Go to Dashcam Preview interface. Please STOP recording first, then press the 'Device Album' to get Photo, Video, Emergency files.

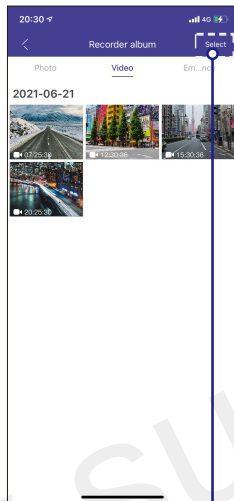

2 Select the video files to download into your smartphone.



3 Press the icon to download the video files. However, it will take a bit of time to download one video file.


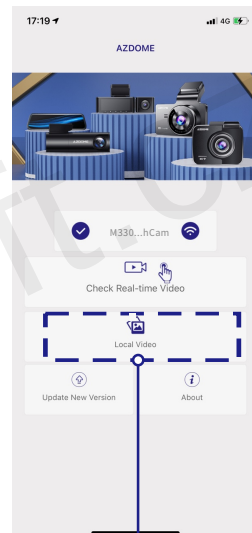


4 Then you can find these downloaded video files in APP original interface menu named 'Downloaded File'.

The app won't show the live video on your phone. It only shows a picture of the beach?

The cellular data will cause the live video not to be viewed. If the APP won't show the live video, please disable the 'AZDOME' cellular data of your phone. Sure that the Local Network of the 'AZDOME' is turned on.

1. For Latest iOS System: Setting→AZDOME→Click 'Wireless Data'→Select 'WLAN'.
2. For Older iOS System: Setting→AZDOME→Disable the 'Cellular Data'.

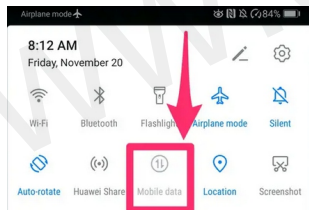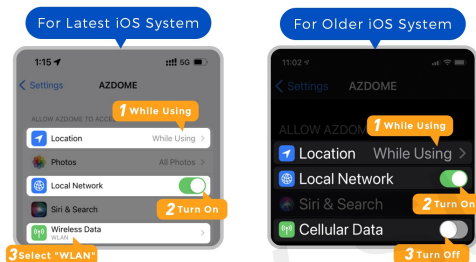

Note:

1. WiFi Direct lets you directly connect your smartphone to your dash cam via WiFi within a range of 10FT.
2. Once it is connected to the AZDOME APP it will automatically update the date/time.
3. The AZDOME is available for devices running Android 5.0 and higher, or iOS 9.0 and higher.

What is a WiFi Feature?

The WiFi feature has been designed so you can pair your dash camera wirelessly with your smartphone and access your recording instantly from the dash cam. Here you can view, download and share your videos easily with your friends and family. Just like how you would connect your Bluetooth speaker to your smartphone for wireless music play, the same way dash cameras use WiFi signal (instead of a Bluetooth) to pair your smartphone with AZDOME M330.


Can I watch the videos around my car remotely?

NO. AZDOME M330 dash cam is NOT made to broadcast footage over the cloud or internet. It is NOT a cloud or an IP camera and it is NOT meant to do that. You can get live video and footage on AZDOME dash cam's APP as long as you stay within the 10FT range from the dashcam.

What is the WiFi Range?

The WiFi signal range is about 10FT when there are NO obstructions in the middle. Please NOTE that just like your home WiFi network, you don't have WiFi signal outside your home, the same way, WiFi range is 10FT from this small device.

9. General Setting

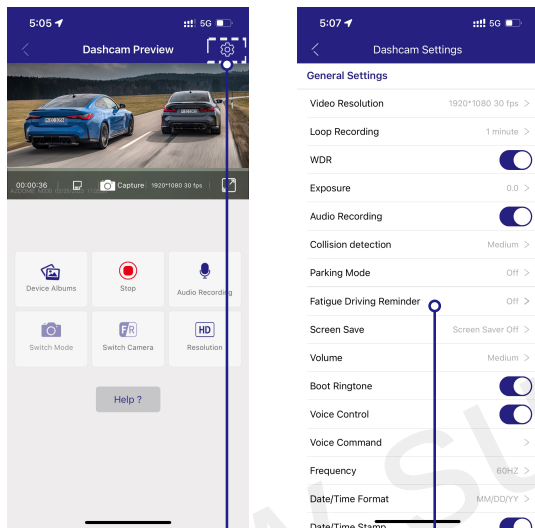

1 Go to Dashcam Preview interface.
Please STOP recording first, then press the settings icon.

2 Select what you need to set.

9.1 Video Settings

Video Resolution

The video resolution of this camera is 1920 x1080P 30fps.

Loop Recording — 1min/ 3mins(Default)/ 5mins

Please select the length of each video clip (1/3/5 minutes) for loop recording. This function enables continuous recording on the dash cam. Please note that when the memory card becomes full, the dash cam will automatically delete the oldest files to make space for new recordings. This ensures that it can continue recording without interruption.

WDR— On(Default)/Off

WDR stands for "Wide Dynamic Range," which means the camera or display can adapt to scenes with large differences in brightness, allowing details in both dark and bright areas to be clearly displayed.

Exposure — -3.0/ -2.0/ -1.0/ +0.0(Default)/ +1.0/ +2.0/ +3.0

To adjust video exposure setting for either brighter or darker video according to your preference.

Audio Recording — On(Default)/Off

The dashcam has built-in microphone to record audio with video. You can choose to record mute video by choosing OFF.

G-Sensor — Off/ Low/ Medium(Default)/ High

G-sensor is a 3-axis impact gravitational accelerometer, designed to detect physical and gravitational forces on the dash cam. Once G-sensor has been triggered due to physical

or gravitational impact force on the camera, the current video file will be locked as an emergency file so it won't be deleted by loop cycle function. The higher the G-Sensor sensitivity is, the less force will be needed to trigger automatic file protection.

Parking Mode

This function will ONLY work when 3-Lead Hardwire Kit is installed properly. This parking mode has three options to choose from.



Note:

Custom-designed JYX05 Type-C 3-Lead Hardwire Kit is required to use this new feature. Not included in the packaging, on Amazon search: [JYX05 Type-C 3-Lead Hardwire Kit for M330 Dash Cam](#)

*Time-Lapse Parking Mode:

1. When you turn OFF the car's engine and turn the key to the lock position. Then the camera will STOP the continuous video recording and it will go into the timelapse 1fps recording mode automatically.
2. Now while this timelapse is being recorded, if someone hits your car and if the impact reaches the set G-Sensor level, then the camera will start to record 1-min continuous video, save & lock that video in Event folder > then return to the timelapse 1fps recording.
3. Now when you start your car for the next time, the camera will automatically STOP the timelapse parking mode. Then it will go into normal video mode automatically to start the continuous video recording.

*Collision Detection Parking Mode:

1. When you turn OFF the car's engine and turn the key to the lock position. Then the camera will STOP the continuous video recording and it will go into the impact detection mode and the camera will turn OFF.
2. Now while the camera stays in impact detection mode, if someone hits your car and if the impact reaches the set G-Sensor level, then the camera will turn ON > then it will start to record 1-min continuous video, save & lock that video in Event folder > then the camera will turn OFF.
3. Now when you start your car for the next time, the camera will automatically go back into normal video mode automatically to start the continuous video recording.

*Normal Recording Parking Mode:

1. When you turn OFF the car's engine and turn the key to the lock position. The camera will continue to record normally.
2. Now the camera stays in impact detection mode, if someone hits your car and if the impact reaches the set G-Sensor level, then the camera will lock the current looping video clip, save & lock that video in Event folder > then the camera will continue to record normally.

Fatigue Driving Reminder— Off(Default)/ 2H

When you activate this feature, the dash cam will beep every 2 hours to remind you if you are experiencing fatigue while driving.

Screen Save— Screen Saver Off(Default)/ Screen Off After 1-Min

Screen Saver Off: This screen will always be on.

Screen Off After 1-Min: The screen will turn off after 1 minute of inactivity.

Volume — Off/ Low(Default)/ MID/ High

This feature allows you to set the volume level for the boot sound volume, prompt volume through camera's internal built-in speaker.

Boot Ringtone — On(Default)/ Off

This feature allows you to turn ON/OFF the camera's Boot Ringtone.

Voice Control — On(Default)/ Off

ONLY support English: turn on WiFi, take picture, turn off recording, turn off WiFi, open recording, lock the video



Note:

Kindly be informed that the voice control feature has an accuracy of approximately 90%, and it may get activated unintentionally due to surrounding environmental noises. Hence, if you do not require this function, you can deactivate it from the settings menu in the AZDOME APP.

Voice Command

Say a command, but ONLY support English

- To turn on WiFi, say [Turn on WiFi](#)

- To turn off WiFi, say [Turn off WiFi](#)
- To take a picture, say [Take picture](#)
- To lock the current video files, say [Lock the video](#)
- To start recording, say [Open recording](#)
- To stop recording, say [Turn off recording](#)
- To open screen, say [Open screen](#)
- To turn of sreen, say [Turn off display](#)

Frequency — 50HZ/ 60HZ(Default)

Here you should choose the frequency accordingly to your power supply specification used in your country based on your geographical location.

Date/Time Format

Thie feature allows you to select the date format.

9.2 Video Stamps

Date/Time

Turn On/Off the Date/TimeStamp shown on recorded files.

LOGO

Turn On/Off the AZDOME logo Stamp shown on recorded files.

Model

Turn On/Off the Model Stamp shown on recorded files.

9.3 System Setting

Synchronization Time

Sync the time of the phone to this M300 dash cam.

Free Storage

Display remaining storage space on the memory card.

Format SD Card

The formatting process will make sure that the card's file system format is optimized for the camera.



Note:

Note: For stable performance, it is recommended that you format the memory card every 1-2 months.

WiFi Name

Here you can change the WiFi Name in APP, the default name: M300_*****

WiFi Password

Here you can change the WiFi Password in APP, the default password: 12345678

Default Settings


Reset the Dash Cam to default settings. Your recordings will not be affected.

Firmware Version

Here you can check the current firmware version installed on your camera. You will need this information in the future to check if newer version of firmware is available.

10. Playing Video Files Using Your Computer

1. Remove the microSD card from the dashcam.
2. Insert the card into a microSD card reader and connect it to your computer.

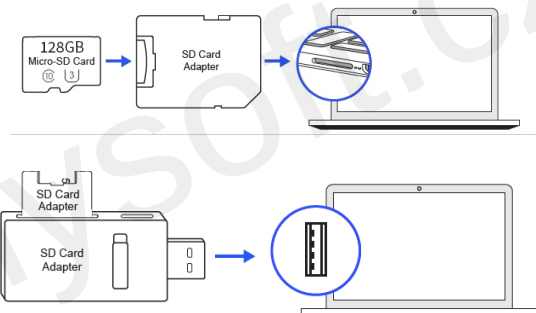

3. Depending on the pre-installed hard drives, you should be able to locate the added flash drive as drive "D," "E," or another name. Once you have located the drive, double-click it to access the file folders, which include Normal, Event, and Photo.


Normal: Normal recording mode saves video files in a loop, allowing them to be overwritten when storage space is needed.

Event: In Event recording mode, the video file will be locked and protected from deletion by the loop recording function.

Photo: This is the folder for storing captured photos.

To play the videos, simply double-click on them.


We recommend using VLC Media Player, which can be downloaded for free at: www.videolan.org.

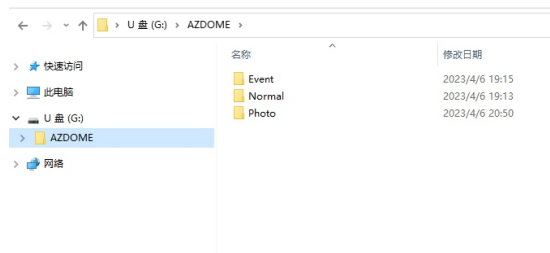

File named *****.MP4 = Dash cam video file

11. Firmware Update

1. Remove the microSD card from the dashcam.
2. Insert the card into the microSD card reader and connect it to a computer.

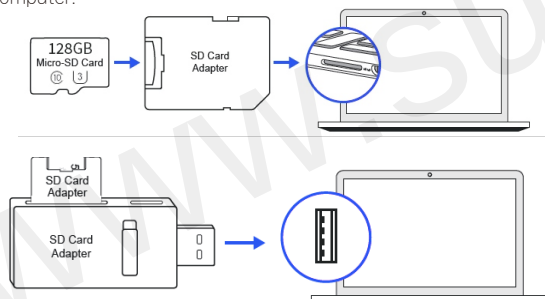

3. Download the latest M330 Firmware from www.azdomes.com > Support > Downloads on your computer.

4. Unzip the downloaded firmware (Zip file) and copy the firmware file named "*****.bin" to the root directory of microSD card.

5. Connect the camera to the car charger to start the firmware update process. You should see the upgrade progress bar which means your M330 dash camera is updating the new firmware. Please NOTE:

The firmware update may take up to about 1mins. So please be patient. Make sure the POWER does NOT get disconnected while the firmware is being updated. Once the firmware is updated, the camera will turn OFF automatically.

6. You can turn on and check the latest firmware version by going into the APP's settings > Firmware Version.

12. Voice Prompts

Prompt Voice	Description
Emergency Video	During recording once G-Sensor triggered
WiFi ON	Default ON, after powered on, say it
WiFi OFF	Press and hold Wi-Fi button for 3s to switch off, say it
Memory card error	Wrong/bad/fake memory card
Recording started	After powered on and boot ringtone /operate via App, say it
Recording stopped	Operate via App, say it
Sound as "Click"	Take picture via App, say it
Format Successfully	Format memory card successfully
Format Failed	Format memory card failed
Parking mode is on	Parking Mode has been turned on
Parking mode is off	Parking Mode has been turned off

13. FAQ

Q1: Camera turns ON / OFF automatically?

Ensure that the output current can reach 5V/1A and use our car charger.

Q2: Video Image is blurred?

Remove the protective lens film, clean the lens, make sure the windshield is clean and clear of grease, dirt, and debris.

Q3: Camera gets HOT?

It is normal for your camera to run slightly hot. Due to video being recorded at high speed, the dash cam may be hot during using. (No more than 158°F/70°C).

Q4: Video Files cannot be played on my computer?

The video files from the Dash Cam are in MP4 format and may not be compatible with your PC if suitable playback software is not installed.

Q5: Video has no sound?

Ensure that 'Audio Recording' setting is turned ON.

Q6: Video is blurred?

The Dash Cam has a minimum focal range of around 2 meters. Objects closer than this are likely to become blurred.

Q7: Voice prompt Memory Error?

Using unqualified SD or third party cards can affect dashcam's performance and in some cases, force the dashcam to reboot randomly during recording. If it still can not work normally, it should be that the TF card is unqualified and can not meet the recording requirements of the dash cam. Please contact us to get a new memory card.

14. Notice

CE This product complies with the radio interface requirements of the European Community.

X This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate and recycling helps protect natural resources, human health and the environment. For more information on disposal and recycling of this product, contact your local municipality, disposal service, or the shop where you bought this product.

FC Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.