

Инструкции за

обслужване

Комплект
кабели

AZDOME

Относно комплекта кабели

Има 2 вида комплекти с кабели.

Комплект кабели с 3 проводника, както е показано на снимката по-долу.



ЧЕРВЕНИЯТ проводник, обозначен с ACC, който е свързан с кутията с предпазители ACC може да осигури автоматично включване и изключване, когато автомобилът се включва и изключва. ЖЪЛТИЯТ проводник, обозначен с В+, който е свързан към постоянния предпазител, може да се включи дори когато автомобилът е изключен. ЧЕРЕН проводник, означен с GND, който е свързан към метален винт или болт, може да предотврати токов удар.

Комплект от 2 проводника за твърдо окабеляване, както е показано на снимката по-долу.



ЧЕРВЕНИЯТ проводник, обозначен с В+, който е свързан към постоянен предпазител, може да го накара да остане включен дори когато автомобилът е изключен. ЧЕРЕН проводник означен с GND, който е свързан към метален винт или болт, може да предотврати токов удар,

Монтаж

Стъпка 1:

Намерете кутията с предпазители


В зависимост от модела на вашето превозно средство може да се наложи да премахнете същата тапицерия или да отворите някои панели, за да я намерите.

Стъпка 2: Използване на адаптери за предпазители за монтаж (не са включени) и. Свържете червения проводник и жълтия проводник (ако са 3 проводника) с адаптер за предпазител и го включете в кутията с предпазители.




б. Свържете черния проводник към метален винт или болт в автомобила. Небоядисан винт или гол метален екипаж е по-добър. Трябва да се свързва САМО с метал, НЕ МОЖЕ да се свързва с други материали, като например пластмаса.


Съвети: В зависимост от вашето превозно средство може да се наложи да решите кой адаптер за предпазители е подходящ за вас. Има много видове, ACZ (Micro2), ACS(Mini), ACN(L P-Nini) и ACU(ATQ), както е показано на снимката по-долу.

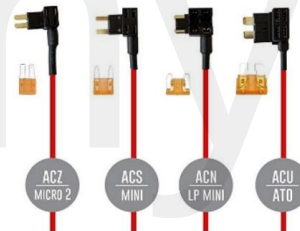

Ако използвате слот за предпазител, в който вече има предпазител, подредете предпазителя, както е показано на илюстрацията по-долу.

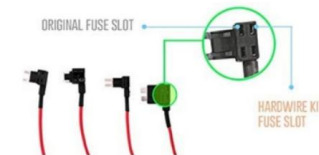

Стъпка 3: Подредете и скрийте кабела, както е показано на снимката.

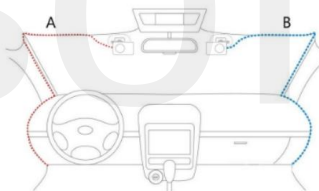

Стъпка 4: Свържете кабела към камерата, включете запалването и тествайте инсталацията.

Дистрибутор
Sunnysoft sro
Кованечка 2390/1a
190 00 Прага 9
Чехия
www.sunnysoft.cz

Owner's Manual

Hardwiring Kit

AZDOME

About the Hardwiring Kit

There are 2 types of hardwiring kits.

3 wires hardwiring kit, as photo below



a RED wire marked ACC, which connected with Fuse Box ACC, can make auto turn on&off when the vehicle is on&off.

a YELLOW wire marked B+, which connected with constant fuse, can make remain on even when the vehicle is off.

a BLACK wire marked GND, which connected with metal bolt or screw, can prevent electric shock.

2 wires hardwiring kit, as photo below



a RED wire marked B+, which connected with constant fuse, can make remain on even when the vehicle is off.

a BLACK wire marked GND, which connected with metal bolt or screw, can prevent electric shock.

1

Installation

Step 1: Locate Your Fuse Box

Depending on the model of your vehicle, you may need to remove some trim or open some panels to find it.

Step 2: Using Fuse Adapters for Installation (Not Included in the package)

a. Connect the hardwire kit red wire and yellow wire (if 3 wires) with the Fuse adapter, and plug inside the fuse box.




2

b. Connect the black wire with the metal bolt or screw in your vehicle. An unpainted bare metal bolt or screw is better.

Should **ONLY** be connected with metal, can **NOT** be attached to any other materials, such as plastic.


Tips:

Depending on your vehicle, you may need to decide which fuse adapter is right for you. There are many types, ACZ(Micro2), ACS(Mini), ACN(LP-Nini) and ACU(ATO) as photo below

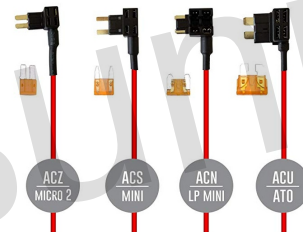


If you are using a fuse slot that has an existing fuse in it, arrange the fuse as photo below,

3

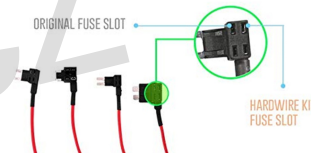

Step 3: Arrange and Hide the cable, as below below,

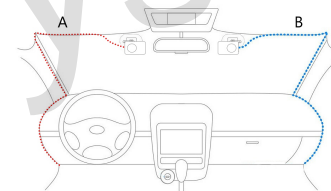

Step 4: Connect the cable with the Dashcam, Turn on the ignition to test the installation.

4

KAKA GROUP LTD
www.azdome.hk info1@azdome.hk
Address : 1801-1808, HaiYun Building,
No. 468, Minzhi Avenue, Longhua New
District, Shenzhen, China. 518000, CN

